



## FleetCam Pro Hub

- Up to 6 channels on the FleetCam Pro
- Built-in pedestrian warning alert
- Supports iButton for driver ID
- Plug & Play installation (OBD II & JBUS)

Get even more from your FleetCam Pro with the FleetCam Pro Hub. Improve visibility, safety, and driver accountability with up to six separate cameras capturing HD footage from around your vehicle. Support for AI-driven pedestrian detection alerts your driver to potential hazards, while an in-cab LCD provides a clear view for cargo monitoring or backing up.

### INPUT / OUTPUT

RS232	3 ch. (232-1 connects to V-Display by default, 232-2 connects to the left side of B3, and 232-3 connects to the right side of B3)
SENSOR IN/OUT	3 Inputs / 1 Output
iButton	1 channel
USB	1 x USB2.0 (Type A), Used for local upgrade
LAN	1 ch., Connect to FleetCam Pro

### POWER

Power supply	DC 9-36V
Output	12V@2A
Standby	24V@5mA

### VIDEO

Input	4 ch. AHD -or- 3 ch. AHD + 1 ch. IPC
Output	1 ch video output, configurable as AHD or CVBS output.

### DIMENSIONS


Size (mm)	192mm x 57mm x 30mm
Weight (g)	554g (Bare Metal)

### ENVIRONMENT


Operating Temp.	-40°C~+70°C
Storage Temp.	-40°C~+85°C
Working Humidity	15%-95% (No condensation)

## Dimensions (mm)


Top

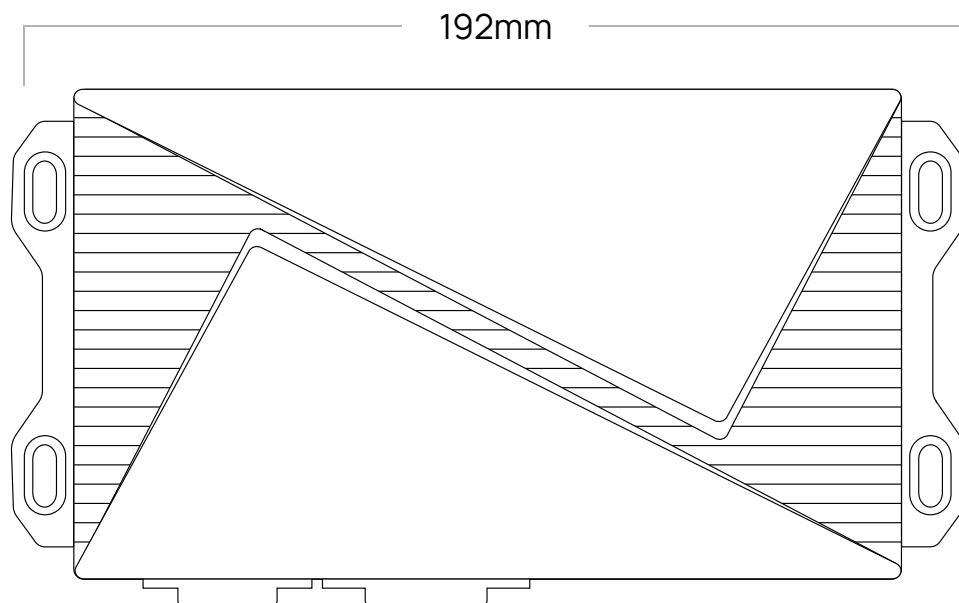


Side

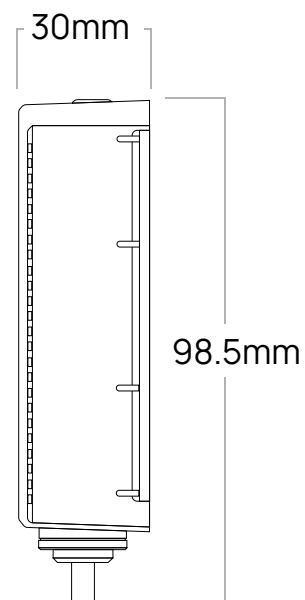

Front

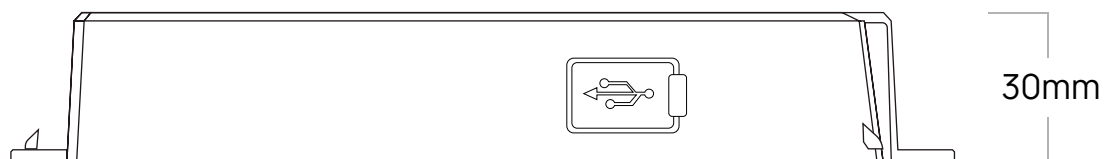


Rear

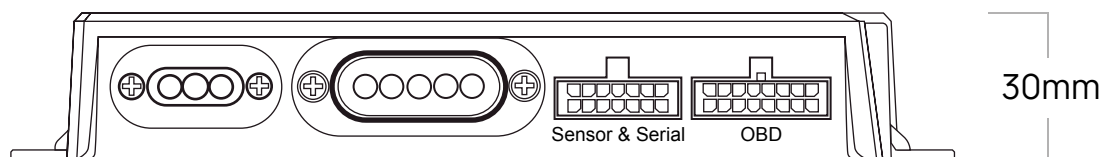


## Panel Interface

 
 
### Front Panel




No.	Silk Screen / Icon	Explanation
1		USB2.0 (Type A), For firmware updates

### Rear Panel

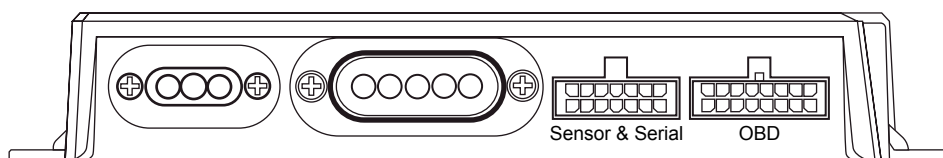


No.	Silk Screen / Icon	Explanation
1	Sensor & Serial	External expansion I/O, iButton and serial
2	OBD	Connect to vehicle OBD interface
3		Video output
4		Connects to VIO port on the FleetCam Pro

## System Diagram (OBD-II)

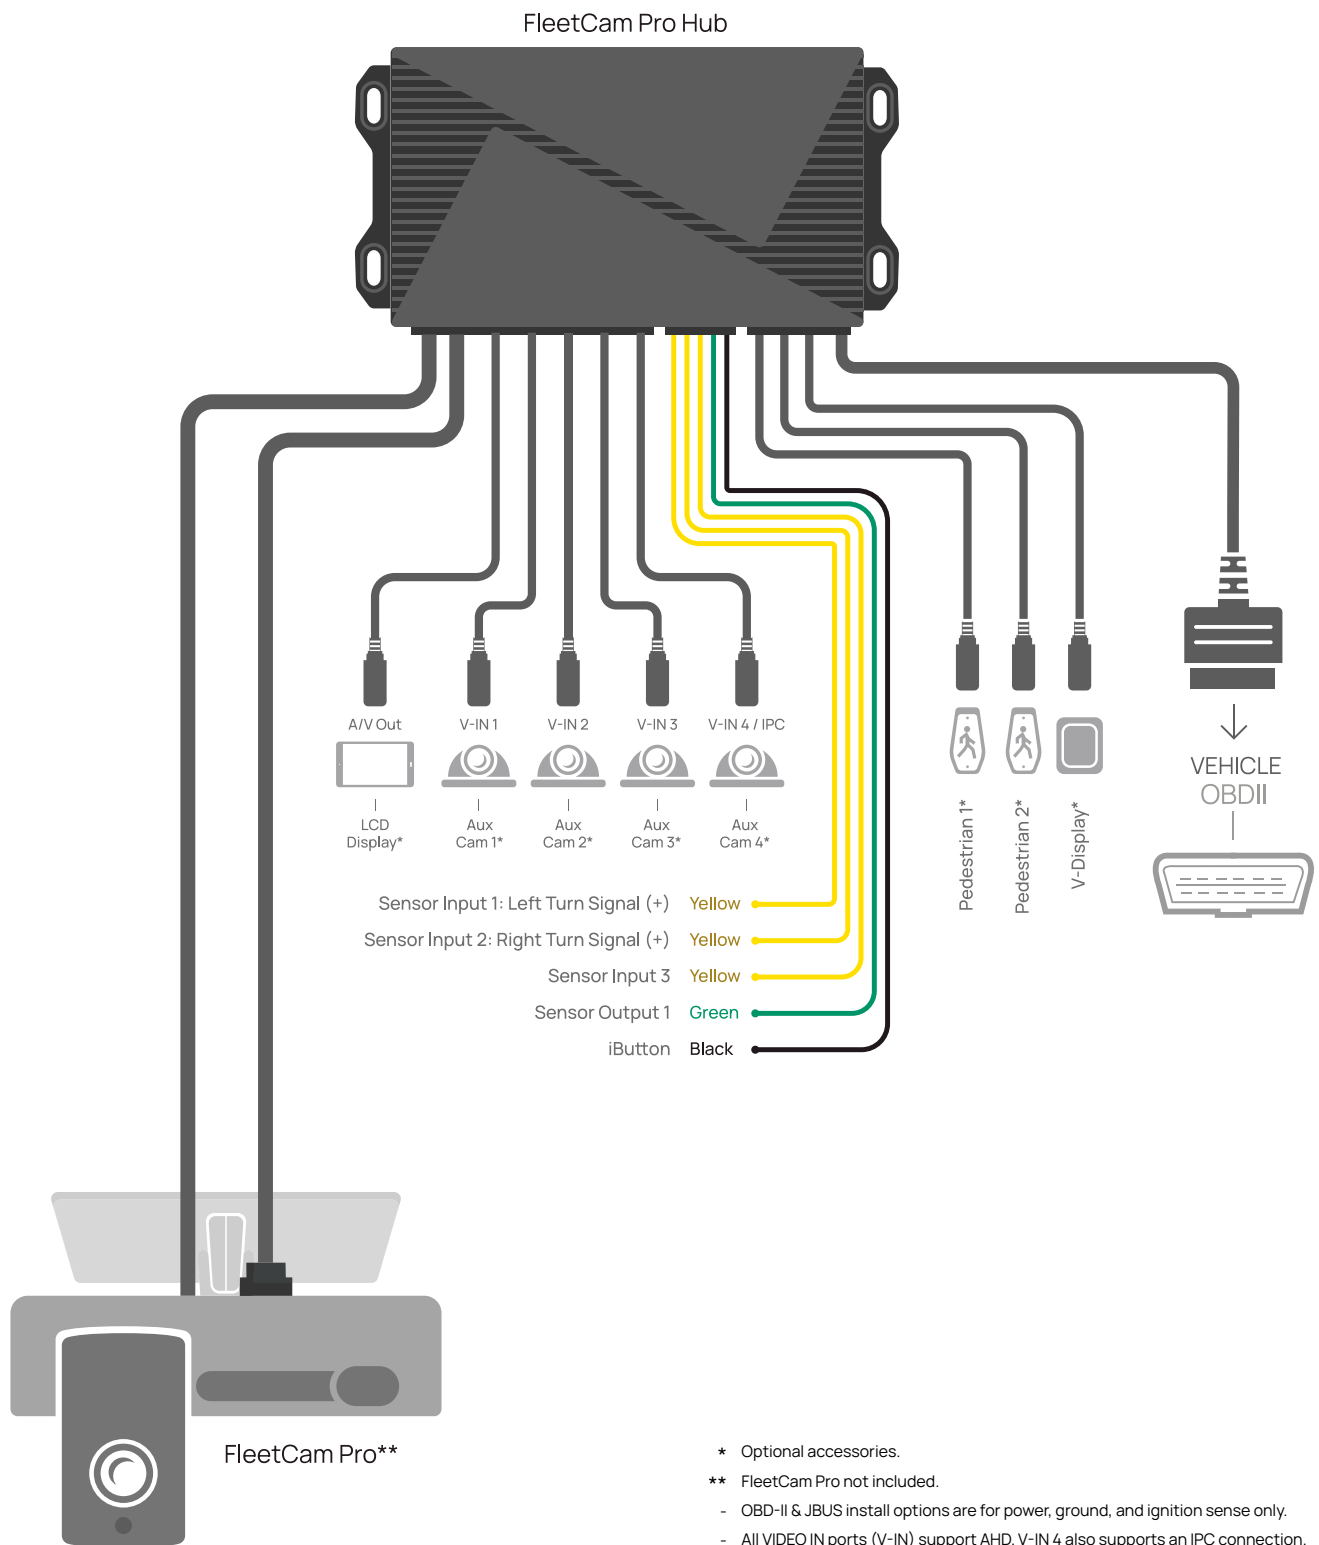

## System Diagram (JBUS)

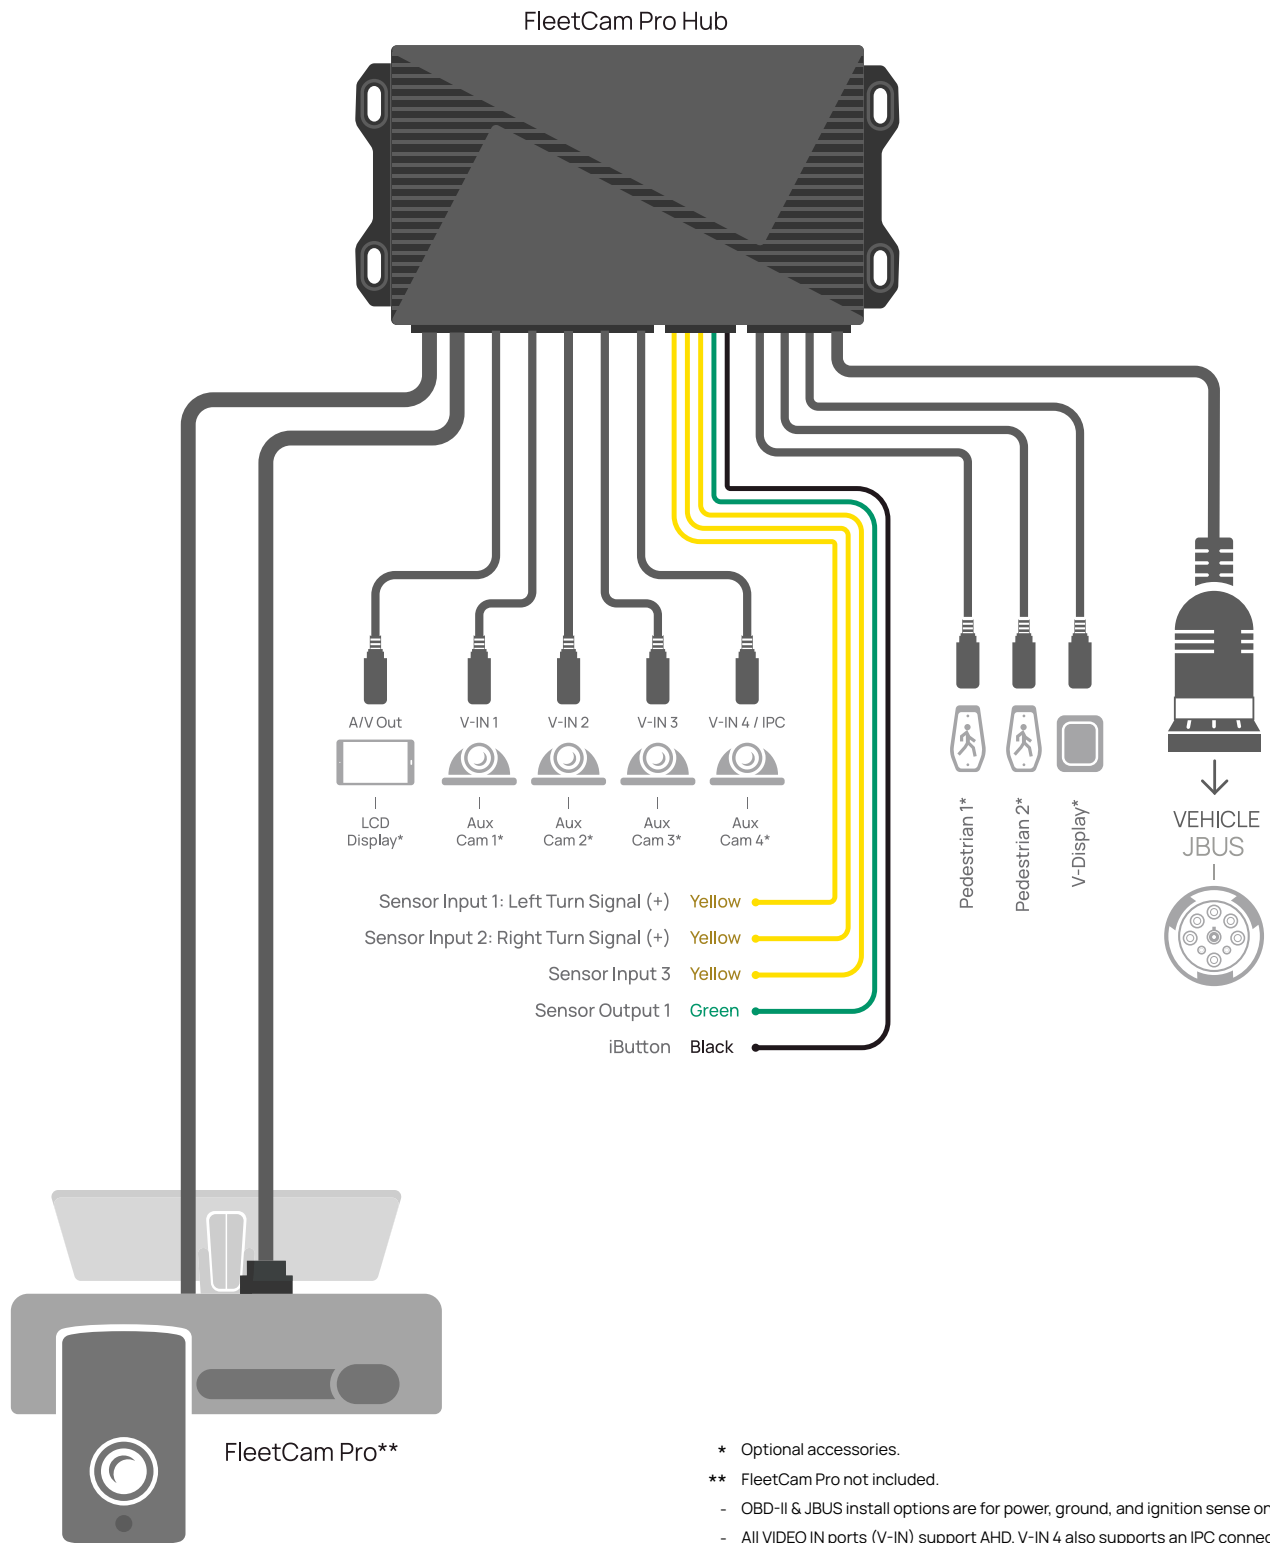

## System Diagram (Hardwired)

