




Cradlepoint IBR 1900 Installation Diagram

- 1 IBR 1900**
 - Cradlepoint Router
- 2 Serial Cable**
 - Connects Serial Port of IBR 1900 to Vehicle Network Adapter
- 3 Vehicle Network Adapter**
 - Provides ECM Diagnostic Data to Cradlepoint Router
- 4 JBUS/OBD-II Adapter**
 - Plugs into vehicle's OEM Diagnostic Port
- 5 Power Harness**
 - **Red** wire to constant power source (+).
 - **Yellow** wire to ignition power source (+).
 - **Black** wire to chassis ground (-).

Front

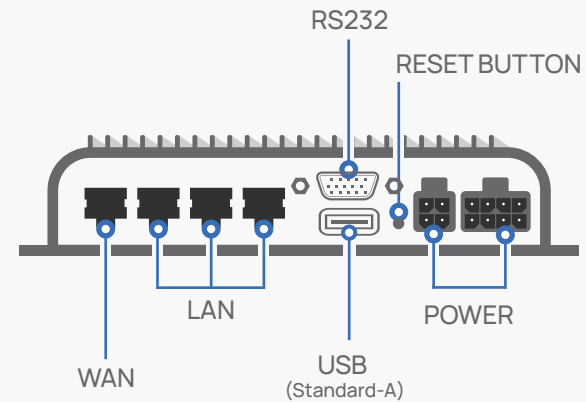

Back

