




Suntech ST4932 Connection Diagram

- 1
- ST4932 Device Mounting Options
- Attach to the **exterior side of the trailer**, close to the **7-Way Plug**.
 - Attach **device** underneath the trailer on the **frame rail** as close to the perimeter as possible. Make sure top of the device is facing the ground.

- 2
- Red Wire
- DRY VAN / REEFER TRAILERS (ABS EQUIPPED):
- Attach **Red wire** of ST4932 to **Blue Auxiliary / ABS wire** on 7-Way Plug.
- TRAILER PLUG FLATBED / CHASSIS TRAILERS (NON-ABS EQUIPPED):
- Attach **Red wire** of ST4932 to **Black Clearance / Side Markers** wire on 7-Way Trailer Plug.

- 3
- Black Wire
- Attach **Black Wire** of ST4932 to **White Ground Wire** on 7-Way Trailer Plug.

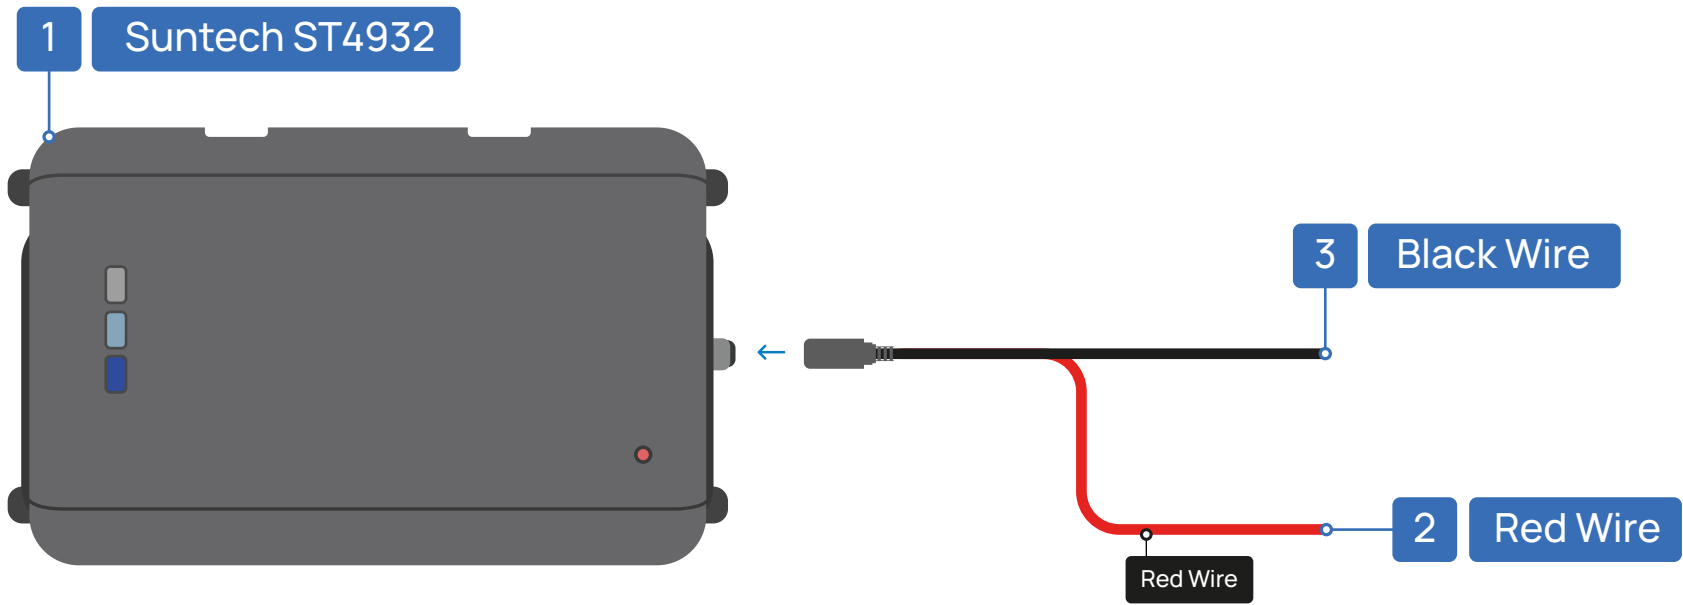

7-Way Heavy Duty Plug Commercial / Agriculture Trailers

